

FOR SINGLE PRESSURE APPLIED CLUTCH

PRESSURE CHECK POINTS HYDRAULIC/SPRING CLUTCH CONTROL VALVE -

- 1. Charge pump pressure 170-210 psi.
- 2. Clutch pressure within 10 psi of pump pressure.
- 3. Pilot pressure of selected clutch within 10 psi of pump pressure.
- 4. Pilot pressure of nonselected clutch 0-25 psi.
- 5. Charge pump flow 3.5 to 5.0 gpm.
- 6. Lube circuit flow within 1.0 gpm of charge pump flow.
- 7. Lube circuit pressure 10-25 psi.

Energizing the left solenoid No. 1 selects the hydraulically applied clutch, energizing the right solenoid No. 2 selects the spring applied clutch. Clutch pressure is checked at port "B". There is not a neutral position for this valve, if electrical power is lost the transmission will stay in the last gear selected.

NOTES